

Process if Exit door of Truck Wash will not open

- Call CMED or Logistics on radio to advise them of problem
- Stay in vehicle till blowers shut off leave Emergency Lights on
- One Person exit vehicle after blowers stop and push the green button on left side of bay door to open door. It should open. (see picture below)



- If door opens then turn switch to off on the upper box so door will stay up and exit truck wash



- If door does not go up. Shut the truck down, exit wash bay through door on right side of bay with your equipment, and notify Supervisor of problem. Truck will be removed as soon as door can be released. Please place cones in front of wash bay to warn others.